



VOTING MACHINES

M100 Optical Scan Tabulator



Marking the Ballot:

After you have been issued a ballot, mark your ballot using the pens provided in the voting booth. The machine will read the ballot and the results will be displayed on the screen.

COMPLETELY

Casting your ballot:

Once your ballot is complete, take it to the M100 Tabulator and feed it into the machine. If the machine accepts the ballot, the results will be displayed on the screen.

If the ballot is accepted into the Tabulator then your ballot has been cast.

Ivotronic Direct Record - ADA Compliant



Activate Ballot:

A pollworker will activate the machine and start your ballot at the instruction page. After reading the instructions, touch the screen to start your ballot.

Select your Choices:

To select the candidate of your choice, touch the box next to the name. A mark will display in the box.

Review your Ballot:

After completing the last ballot page, touch "review" and carefully review the selection review screen. Touch the screen to confirm your selections.

Casting your Ballot:

When finished, touch the green

Vote

"

square

When

"Thank your for Voting" appears on the screen, you have properly cast your ballot



